


simalube filling and refilling with oil

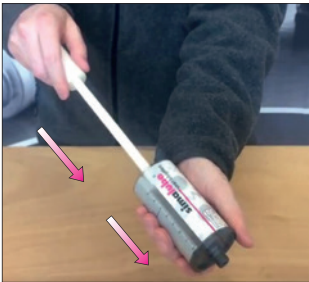

Push piston all the way down to the grey end



Fit the simalube onto the supply fitting and filling with oil. ⚠ Do NOT overfill!




Insert the yellow non-return valve



Check O-ring position



Screw in gas generator and tighten to 1.5-2.0 Nm

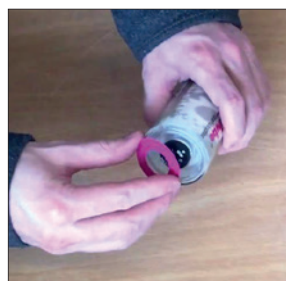

Stick on magenta ring



Mark lubricator with grease type